



The following switch will allow 2 x ZM6 units to be wired in but at any given time only one will be active.

The BATT and IGN terminals will both require piggy back

ZM6 #1 FIELD

ALT FIELD

ZM6 #2 FIELD



ZM6 #1 Earth

Common Earth

ZM6 #2 Earth

Switch part number JAYCAR ST0575 Double pole double throw On – On

