



This page describes how to convert an external brush block




Cut the earth tang off, use a small hacksaw

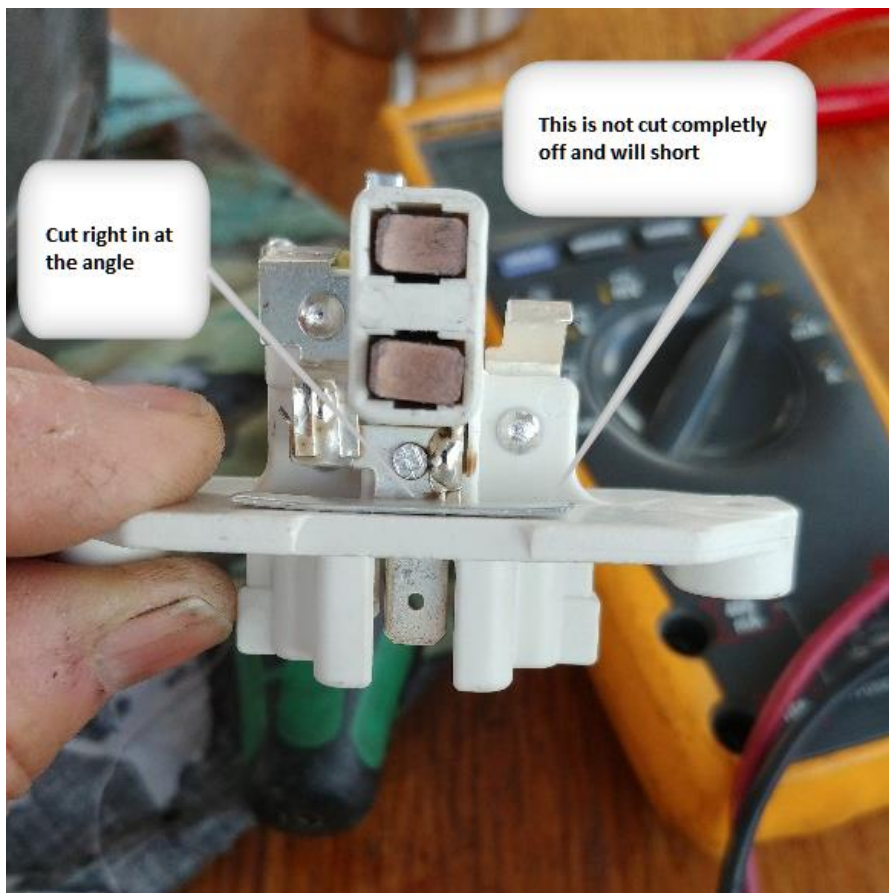

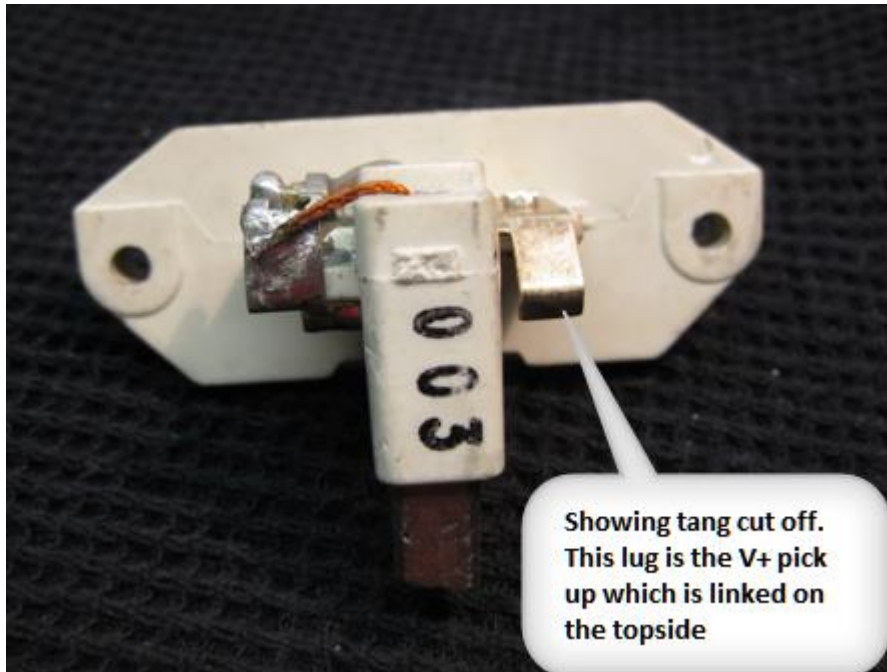

Finished result will look like this.

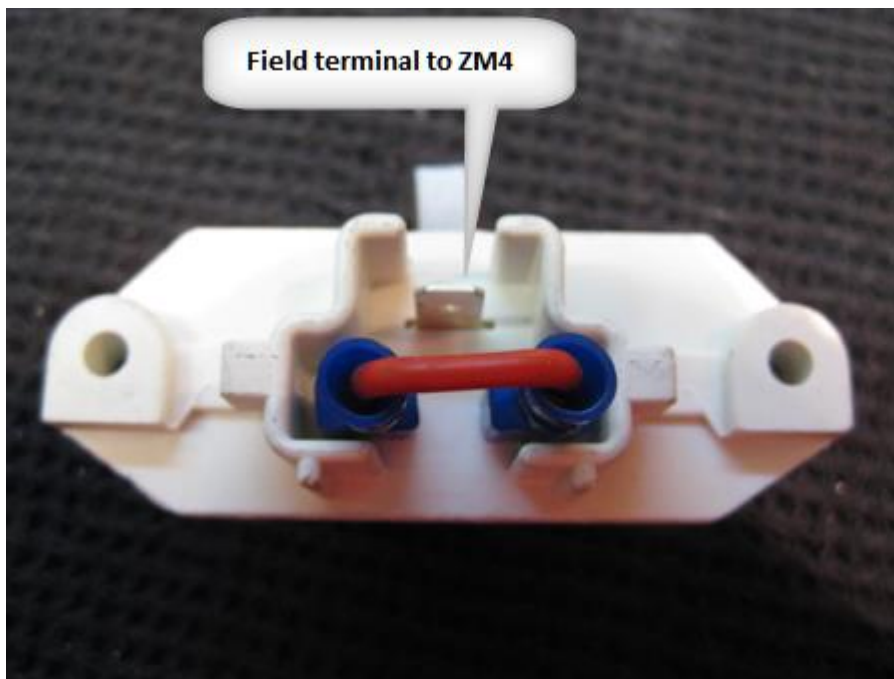

Link these two terminals together, the other male spade terminal is now the FIELD terminal on the ZM4

Note: disregard the label on the various terminals, they are not necessarily correct.

If you do not remove the earth tang the alternator will attempt to drive to full output