



This is a suggested set up with dual engine installation, for single engine disregard Left /Right battery switch.
 Make sure VSR (voltage sensitive relay) is earthed.
 If you have a diode splitter make sure the battery sense wire is on the battery side of the splitter.

ZM4 Battery set up VSR	
15/06/2013 11:33:30 a.m.	
Sheet: 1/1	