 


This page describes how to convert from a NEXT Step to a ZM4

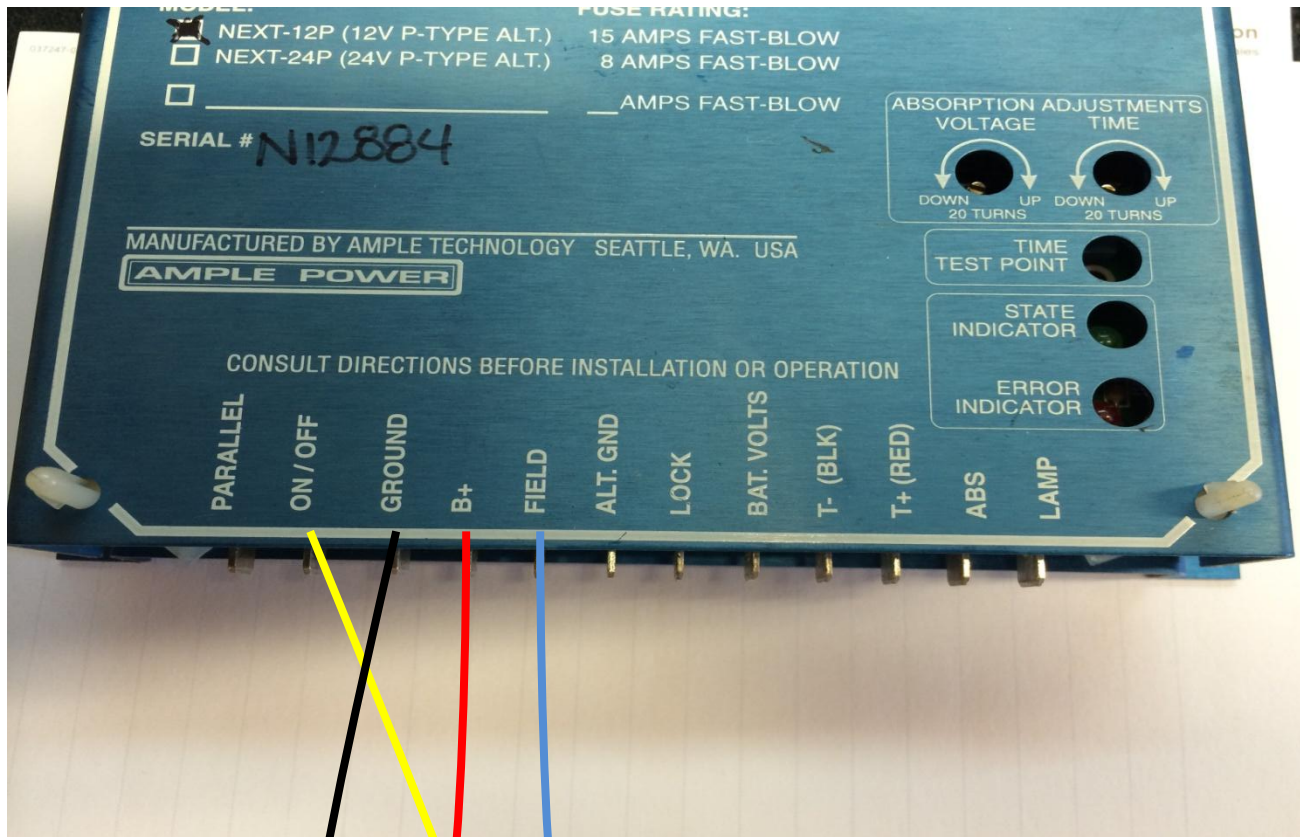 


These two photos show the connection between the Next Step and ZM4

Note- Next Step run "P" switching where as the ZM4 runs "N" switching, this means your alternator will require the opposite brush connecting to allow the conversion



Next Step 2 Alternator Regulator

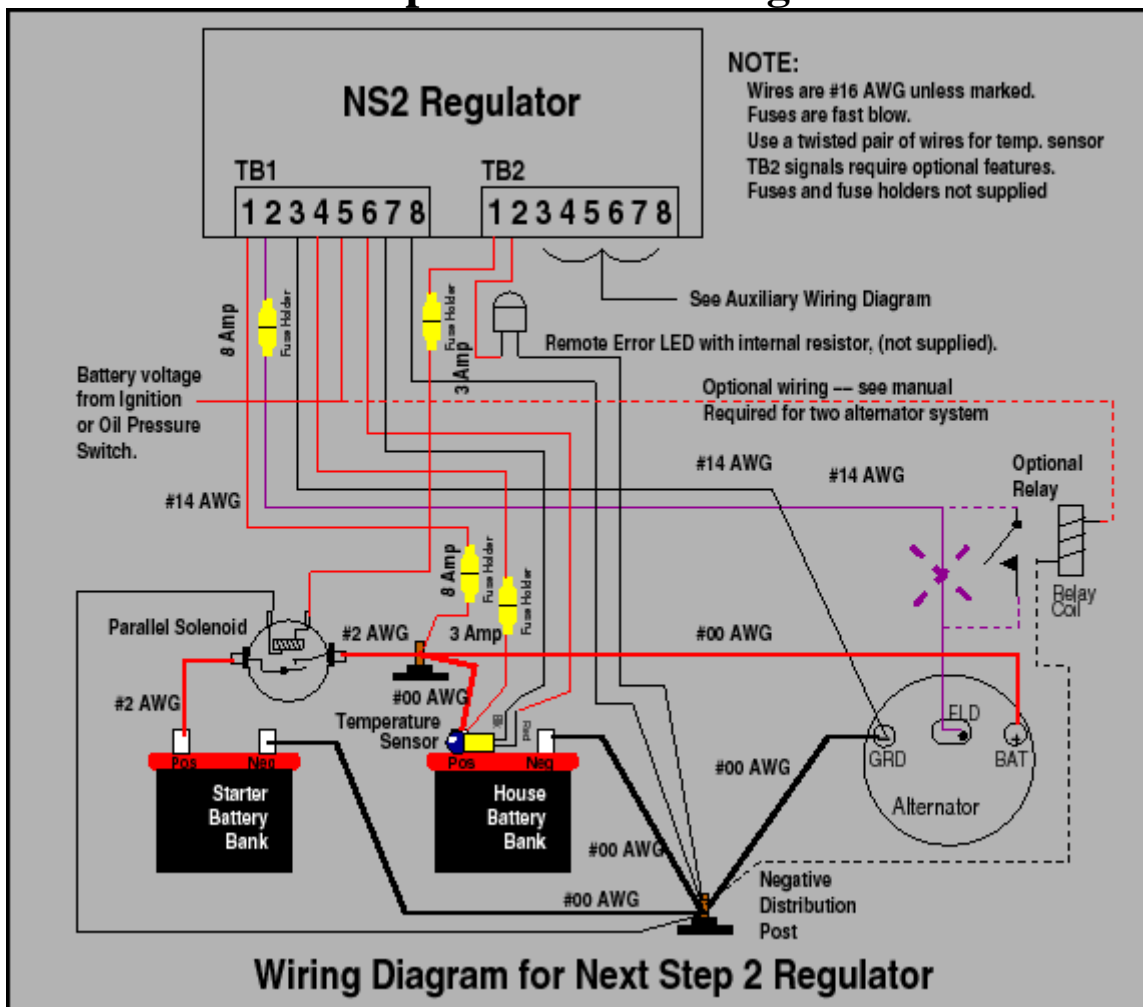

TB1 Signal Names and Functions

- Pin 1, to ZM4 BATT terminal
- Pin 2, to ZM4 FIELD terminal
- Pin 3, to ZM4 NEG terminal
- Pin 5, to ZM4 IGN terminal