


This page describes how to convert from an Ample Power regulator to a ZM6. There will be surplus wires that are not required for the ZM6

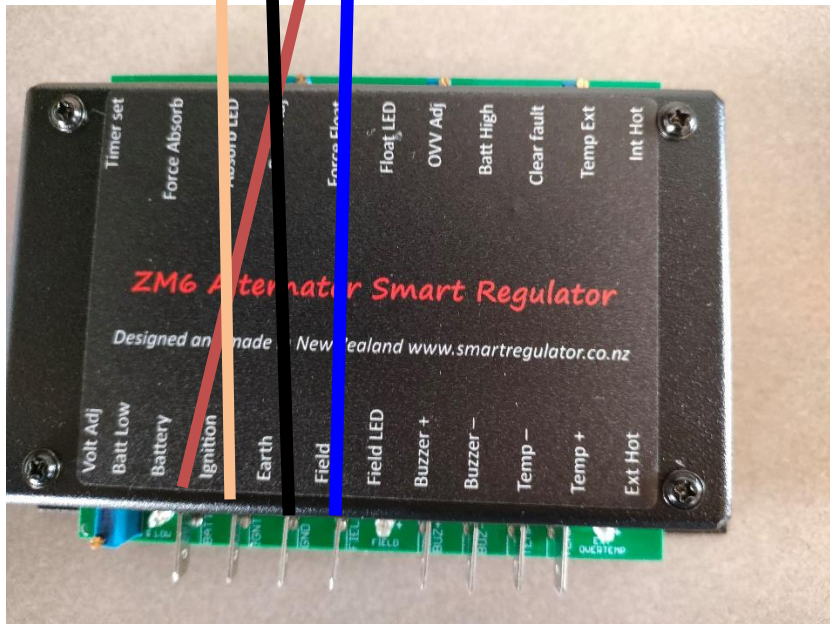

Ample Power connections	ZM6 connections
On/Off	Ignition
Ground	Earth
B+ or Batt Volts	Battery
Field	Field

Note the temperature probe has a different resistance between units, therefore you cannot use the Ample Power thermistor on the ZM6.